

### **WARNING**

#### **Safety Instructions**

CAREFULLY READ AND FOLLOW INSTRUCTIONS BEFORE USING THE HOT-SHOT® DURAPROD™.

- The DuraProd™ is DESIGNED FOR USE ON LIVESTOCK ONLY.
- Never use the DuraProd™ on humans.
- KEEP THE UNIT AWAY FROM CHILDREN.

- The DuraProd™ generates a high voltage pulse, and you should never touch the electrodes while the unit is activated.
- The DuraProd™ is always ready for use when batteries are inserted.
- Before cleaning the DuraProd™, remove the batteries.
- Protect the DuraProd™ from moisture.
- Use in a well ventilated area. Do not use near flammable liquids or dust.

- Whenever the Prod is not in use, move the trigger lock to the lock position.
- IF USING RECHARGEABLE UNIT COMPLETELY CHARGE PRIOR TO FIRST USE.

**Application** The DuraProd™ is an electric livestock prod designed to assist in the movement of cattle and hogs.

**Function** The DuraProd™ uses batteries to power an electronic circuit that generates a high voltage pulse. This pulse is delivered by touching the animal with the two electrodes.

**Animal Protection** Please follow the regulations that apply to animal protection & slaughtering in your area.

**Changing Batteries** Before attempting to remove the battery compartment, make sure the trigger lock is engaged (located on the bottom of the handle).

#### **Removing & Reinstalling the Battery Pack:**

1. Detach the battery compartment from the end of the DuraProd™ by applying pressure to the opposing black tabs connecting the compartment to the handle.
2. As you squeeze the tabs, lightly pull the compartment away from the handle.
3. The compartment should come free with little effort.
4. For reinstallation of the Battery Pack: depress Battery Pack tabs and snap onto Motor unit to secure.

For the ALKALINE BATTERY PACK, the batteries are secured in the Battery Pack by a twist-off cap. To remove and replace:

- Twist off the cap by turning the top counterclockwise.
- Remove all batteries and insert the new ones according to the diagram.
- Replace the cap, press firmly, and turn clockwise.

For the RECHARGEABLE BATTERY PACK, the Battery Pack needs to be placed in the Charger Base. DO NOT ATTEMPT TO USE WITH ANY OTHER TYPE OF ADAPTOR. This can cause severe damage to the batteries, and will void any warranty.

- To charge, place the pack into the base, making sure the charger cord is properly plugged into the Charger Base and a working power supply.
- The LED light will turn on and continue to flash until the battery is fully charged (approx. 16 hours).
- After 16 hours the LED light will stop flashing and remain on (solid light). The Charger Base has an internal timer. If the Battery Pack is removed from the base, the timer will reset.
- Do not disassemble the Charger Base. There are no serviceable parts inside. Disassembly will void the warranty.
- Unplug the Charger Base when not in use.
- Never expose the Charger Base to moisture.
- The Battery Pack can remain in the Charger Base for an extended period of time without damage.

# Instructions

ENGLISH



When the Battery Pack is fully charged, reattach the pack onto the DuraProd™ by “snapping” it onto the handle. Do not disassemble the Rechargeable Battery Pack. There are no serviceable parts inside. Disassembly of the Rechargeable Battery Pack will void product warranty. The Rechargeable Battery Pack will need to be fully charged before the prod can be used for the first time.

The DuraProd™ is now ready for use.

## Using the HOT-SHOT® DuraProd™

- Make sure the trigger lock is in the “down” or “unlocked” position.
- Apply the electrodes to the muscle of the hind leg of the animal. Press and release trigger. Never touch the prod to an animals face, ears, head area, or genitals.
- As an alternative method, press the trigger and then touch the animal.

The DuraProd™ is a humane means for moving stubborn animals when other methods are ineffective. Never hold the electrodes on an animal for an extended period while the trigger is depressed.

## Maintaining your HOT-SHOT® DuraProd™

Before cleaning your DuraProd™, remove the Battery Pack. Use a damp cloth and a mild household cleaning agent to clean. Do not immerse in liquid as this will damage the unit and void the warranty. Make sure your DuraProd™ is completely dry before reassembly and use.

## Available Accessories

- Rigid Fiberglass Shafts (RH) - 2 sizes available
- Flexible Shafts (FX)- 4 sizes available
- Rechargeable Battery Pack (item # DXRBP)
- Recharging Base for use with Rechargeable Battery Pack (item # DXRC)
- 12V Auto Charger
- 240V Wall Charger
- HOT-SHOT® High-Amp Alkaline Size C Batteries (item # ALKDP)

## Warranty

DuraProd	1 year (date of purchase)
HUDX	1 year (date of purchase)
HUDXR	1 year (date of purchase)
DX1	2 year (date of purchase)
DXRBP	1 year (date of mfg)
DXABP	30 days (date of purchase)
DXRKIT	30 days (date of purchase)
DXRC1	30 days (date of purchase)
DXRC2	30 days (date of purchase)
Shafts (all)	Electrical continuity material, & workmanship. No warranty after sale to end user.
Alkaline Batteries	4 year shelf life (no warranty after sale to end user)

## Troubleshooting little or no spark

Potential Cause	Possible Fix
Weak Batteries	Recharge or replace batteries.
Poor Contact	Check and clean all contact points making sure they are free of corrosion.
Moisture in Case	Remove Shaft and Battery Pack. Use compressed air blow into shaft end of handle. As a last resort, disassemble handle case by removing screws and dry inside of case.

Still not functioning? Call HOT-SHOT® Customer Service at 07 3283 5077 or return prod to your dealer for repairs.