

Warranty

Pacific Biologics will repair any faulty part of your Magrath power pack for a period of 12 months from the date of purchase.

This warranty does not cover the following items:

- Casing breakage or any form of physical damage
- Damage due to or caused by tampering with the power pack
- Postage or freight costs.
- Extension shafts.

The warranty may be void if the warranty card is not completed and returned to Pacific Biologics within 14 days of purchase.

Repair and Warranty Service

- Some Stock Prods may be beyond repair. If under warranty a replacement pack may be issued at the discretion of Pacific Biologics.
- A repair charge will apply to Magrath Stock Prods that are repaired out of warranty. Repairs will have a 6 months warranty from date of repair.
- When returning your Magrath Stock Prod to Pacific Biologics please include:
 - o Your name and address including a contact phone number
 - o Date of purchase and store where purchased
 - o **DO NOT** return batteries
 - o **DO NOT** return extension shaft

WARNINGS

- This Stock Prod is **DESIGNED FOR USE ON LIVESTOCK ONLY.**
- **KEEP THE UNIT AWAY FROM CHILDREN AND NEVER USE ON HUMANS.**
- **KEEP STOCK PROD DRY.**
- Clean, Dry and Store your Magrath Stock Prod in a dry environment. Remove batteries prior to cleaning or drying.
- If unit gets wet, **IMMEDIATELY TAKE STEPS TO THOROUGHLY DRY UNIT OUT** to avoid corrosion and/or unintended shock.
- This Stock Prod generates a high voltage pulse, never touch the metal tips whilst batteries are in the unit.
- This Stock Prod is ready for operation when batteries are installed; one shock is stored in the metal tips after release of the trigger. Always handle with caution.
- Always use in a well ventilated area, **DO NOT** use near flammable liquids or dust.
- Intended for ground use only.



Pacific Biologics Pty Ltd

35 Beach Street

Kippa-Ring QLD 4021

www.pacificbiologics.com.au

Magrath Stock Prod

Instruction Manual

*Now with NEW
Insulated Trigger*

*Operating
Instruction*


Problem Solving

Warranty

Repair Service

Warnings



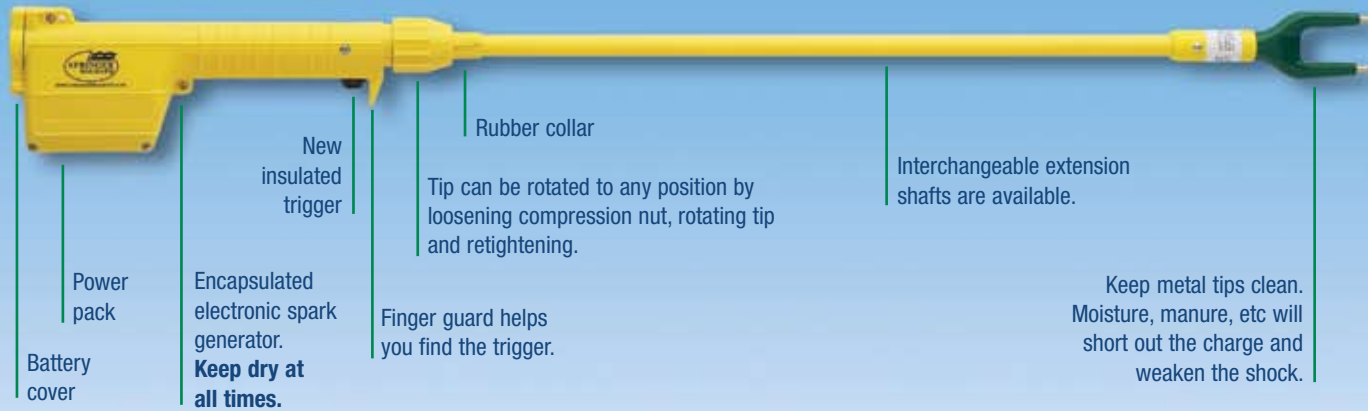

Magrath Stock Prod / **NEW AND IMPROVED**

Getting Started

- Open battery cover on Power pack
- Load 4 new C size batteries, positive end first, into the Power pack (Note: steel, sealed, alkaline batteries are recommended)
- Secure battery cover
- Secure extension shaft to Power pack

CAUTION: Do not operate unit without an extension shaft attached

Testing your Magrath Stock Prod

- Depress and hold down trigger, Power pack should emit a buzzing sound
- Release trigger, buzzing should stop; your unit is now operational
- Touch both metal tips of extension shaft to a metal surface or object
- A spark should discharge on contact

CAUTION: One shock is stored after the trigger has been released. If not being used immediately, always discharge the unit by touching the metal tips on a metal object.

Operating Instructions

- Depress trigger and release, or hold down trigger for continuous discharge.
- Touch animal with both metal tips of the extension shaft to release the charge.

CAUTION: If wet, discontinue use immediately – remove insulated trigger, batteries, and extension shaft and then blow dry or allow to air-dry COMPLETELY before next use.

Maintenance and Storage

- Always thoroughly clean and dry your Magrath Stock Prod after use.
- Always store your Magrath Stock Prod in a dry place.
- DO NOT allow the batteries to become corroded.
- When not in use, remove batteries and extension shaft.
- It is best to store your Magrath Stock Prod either lying down or hanging with the tip facing down to minimize moisture running into power unit.

Problem Solving

Most problems with your Magrath Stock Prod may be due to low or dead batteries. Always check the batteries first when your Magrath Stock Prod does not work properly. The following guide will assist you in problem solving.

1. No Spark

Remove and refit the extension shaft and re-test your Magrath Stock Prod. With the trigger depressed listen for buzzing sound. Touch metal tips against a metal surface. A spark should occur, if there is no spark it may be due to:

[a] The batteries being low or dead. In this case, your Magrath Stock Prod does not make a buzzing sound when the trigger is depressed. Replace batteries with new ones: If Prod fails to work after installing new batteries, check [b] and [c].

[b] The connections between the battery cover and back clip are not making contact. A poor connection between the extension shaft and front washer may also prevent a spark from occurring. Clean and check connections and test your Magrath Stock Prod again with new batteries.

[c] Moisture due to unintended use or incorrect storage [see maintenance and storage] can cause corrosion on the contact points or copper strip. Allow your Stock Prod to dry out thoroughly, clean and retest.

If your Stock Prod does still not work after checking [a], [b] or [c] above, return to Pacific Biologics for service.

2. Intermittent or Poor Spark

[d] Test your Magrath Stock Prod as directed above in [a], [b], and [c]. If problem persists go to [e].

[e] Thoroughly clean and dry metal tips and the extension shaft. Metal tips can be cleaned with liquid metal cleaner. Never use an abrasive scourer as metal tip damage may occur. Repeat [b], if problem persists go to [f].

[f] Return to your retailer and check power pack with new shaft.

If the problem persists, return to Pacific Biologics for service.